

Benutzeranleitung
KRANSEEN
FÜR LÜFTERDACH
VAR ISTAR

User Manual
LIFTING EYES
FOR FAN TOP COVER
VAR ISTAR

Instructions utilisateur
ANNEAUX DE LEVAGE
POUR TOIT DE VENTILATION
VAR ISTAR



1(4x)



2(4x)




3(4x)
(PA6)


4(4x)



5(4x)
(Stahl
Steel
Acier)

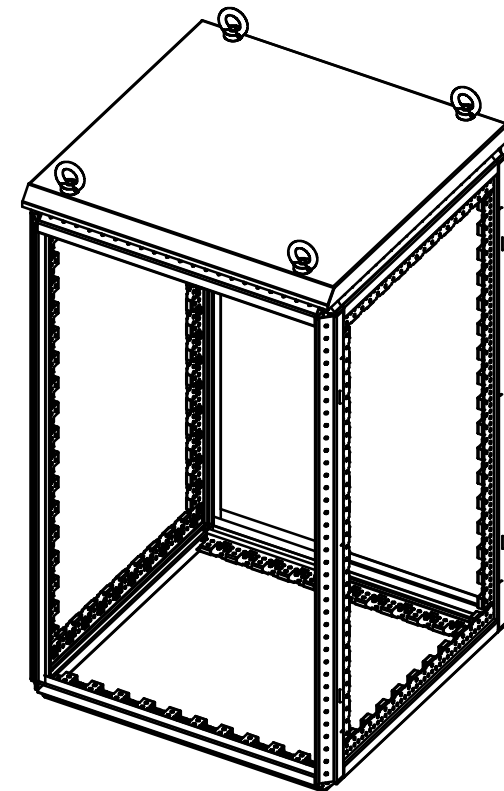

Sicherheitshinweis für Kranösen MI2 Safety instructions for lifting eyes MI2 Consignes de sécurité pour les anneaux de levage MI2

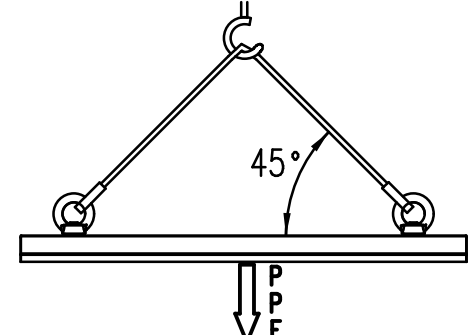Belastungsart Direction of lift Mode d'accrochage	Maximale Belastbarkeit Maximum load-carrying capacity Charge admissible
	340kg
	240kg
Vorgeschriebene Werte dürfen nicht überschritten werden. Specified values must not be exceeded. Ne pas dépasser les valeurs indiquées.	

