

# **CPCI System Subrack 2 U**

## **User's Manual**



**Product No.:**  
**24579-082**

---

| Rev. | Date updated     | Change                               |
|------|------------------|--------------------------------------|
| R1.0 | January 14, 2008 | Initial Release                      |
| R1.1 | April 18, 2011   | Fan Tray with mini compression latch |

Impressum:

Schroff GmbH

D-75334 Straubenhardt, Germany

The details in this manual have been carefully compiled and checked.

The company cannot accept any liability for errors or misprints. The company reserves the right to amendments of technical specifications due to further development and improvement of products.

Copyright © 2011

All rights and technical modifications reserved.

---

## Table of Contents

|          |                                                           |           |
|----------|-----------------------------------------------------------|-----------|
| <b>1</b> | <b>Safety .....</b>                                       | <b>1</b>  |
| 1.1      | Intended Application .....                                | 1         |
| 1.2      | Safety Instructions .....                                 | 2         |
| 1.2.1    | Safety Symbols used in this document .....                | 2         |
| 1.3      | General Safety Precautions .....                          | 2         |
| <b>2</b> | <b>Product Definition .....</b>                           | <b>3</b>  |
| 2.1      | References and Architecture Specifications .....          | 3         |
| 2.2      | Subrack System Overview .....                             | 4         |
| 2.3      | Subrack: .....                                            | 4         |
| 2.4      | CPCI Backplane .....                                      | 4         |
| 2.5      | Power Supply .....                                        | 5         |
| 2.5.1    | Grounding/Earthing .....                                  | 5         |
| 2.5.2    | CPCI Plug-In AC Power Supply (Order separately) .....     | 6         |
| 2.6      | Cooling .....                                             | 7         |
| 2.7      | Remove/Install Fan Tray .....                             | 7         |
| <b>3</b> | <b>Installation .....</b>                                 | <b>9</b>  |
| 3.1      | General Installation Guidelines .....                     | 9         |
| 3.1.1    | Unpacking .....                                           | 9         |
| 3.1.2    | Ensuring Proper Airflow .....                             | 9         |
| 3.2      | Rack-Mounting .....                                       | 10        |
| 3.3      | Initial Operation .....                                   | 10        |
| <b>4</b> | <b>Service .....</b>                                      | <b>11</b> |
| 4.1      | Technical support and Return for Service Assistance ..... | 11        |
| 4.2      | Declaration of Conformity .....                           | 11        |
| 4.3      | Scope of Delivery .....                                   | 12        |
| 4.4      | Accessories .....                                         | 12        |
| 4.5      | Spare Parts .....                                         | 12        |
| <b>5</b> | <b>Technical Data .....</b>                               | <b>13</b> |
| <b>6</b> | <b>Dimensions .....</b>                                   | <b>14</b> |



# 1 Safety

## 1.1 Intended Application

The CompactPCI (CPCI) system subrack, described in this manual, is intended as a platform for a microcomputer system based on the CompactPCI Standard PICMG 2.0 Rev.3.

The CPCI system subracks are designed for protection class IP 20 and can be used only in the resp. environments.

For higher protection requirements, e.g. IP 54/55 you must install the system subrack in a protective case.

CPCI system subracks are not end-products, so there is no valid approval for this unit. In order to enable stand-alone functionality, additional elements are required. An operational system is achieved only by way of appropriate CPCI boards.

The completion and final testing of the units have been carried out, or at least supervised, by qualified technicians. These instructions are directed exclusively to these qualified technicians i.e. engineers, trained and qualified electricians etc.

Make sure that:

- the finished system complies with the safety regulations currently applicable in the country it is going to be used.
- the finished system complies with all other regulations and specifications at the place and country of use, e.g. interference limits, approval by the telecommunications authorities.

## 1.2 Safety Instructions

The intended audience of this User's Manual is system integrators and hardware/software engineers.

### 1.2.1 Safety Symbols used in this document

|                                                                                    |                                                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <p><b>Hazardous voltage!</b></p> <p><i>This is the electrical hazard symbol. Familiarise yourself with the danger of electrical voltages and the safety precautions to avoid accidents before starting to work with parts that carry dangerous voltages.</i></p>   |
|   | <p><b>Caution!</b></p> <p><i>This is the user caution symbol. It indicates a condition where damage of the equipment or injury of the service personnel could occur. To reduce the risk of damage or injury, follow all steps or procedures as instructed.</i></p> |
|  | <p><b>Danger of electrostatic discharge!</b></p> <p><i>Static electricity can damage sensitive components in a system. To avoid damage, wear ESD wrist straps or at regular intervals touch blank enclosure parts.</i></p>                                         |

## 1.3 General Safety Precautions

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Warning!</b></p> <p><i>Voltages over 60 VDC can be present in this equipment. This equipment is intended to be accessed, to be installed and maintained by qualified and trained service personnel only.</i></p> <p><i>This equipment is designed in accordance with protection class 1!</i></p> <p><i>It must therefore be operated only with protective GND/earth connection!</i></p> |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- Service personnel must know the necessary electrical safety, wiring and connection practices for installing this equipment.
- Install this equipment only in compliance with local and national electrical codes.

## 2 Product Definition

The Schroff CPCI system subrack consists of:

- A shielded 19" subrack with front and rear card cage for 6 U boards according to CompactPCI Standard PICMG 2.0 Rev.3
- A 6 U 4 slot CPCI Backplane, system slot left (bottom)
- Two slots for optional CPCI plug-in power supplies (250 W)
- Fans for the active cooling of the boards
- Power input module with IEC 320-C14 connector, mains/line switch, mains/line filter and fuses

### 2.1 References and Architecture Specifications

- User Manual CPCI Backplanes  
Order no.: 73972-101
- Technical Data Schroff CPCI Backplanes 23006-7xx  
Order no.: 73972-088
- User Guide Schroff CPCI Backplanes 23006-795  
Order no.: 63972-213

Further information can also be found in the catalogue „Electronic Packaging“ and on the internet under [www.schroff.biz](http://www.schroff.biz)

## 2.2 Subrack System Overview

Figure 1: System Overview



12311811

- |   |                 |   |                                                   |
|---|-----------------|---|---------------------------------------------------|
| 1 | Fan Tray        | 3 | Slot for Power Supply                             |
| 2 | Front Card Cage | 4 | Slot for Power Supply with Front panel 3 U / 8 HP |

## 2.3 Subrack:

The 2 U 19" subrack is based on the Schroff europacPRO system with EMC shielding. The card cage enables the horizontal assembly of 4 CPCI front boards (6 U, 4 HP, 160 mm deep) and 4 Rear I/O Boards (6 U, 4 HP, 80 mm deep).

The right guide rails of the board cage are equipped with ESD clips.

## 2.4 CPCI Backplane

The horizontally assembled 6 U Backplane provides:

- CompactPCI bus (PICMG2.0 R.3.0) with System Slot left (bottom)
- Connector for the Fan Tray at the left side
- Two 47-position CPCI power connectors for the power supplies at the right side

Applicable Specifications:

PICMG 2.0 R3.0 CPCI Core Specification

PICMG 2.01 R2.0 Hot Swap

PICMG 2.09 R1.0 System Management Bus

PICMG 2.10 R1.0 Keying

## 2.5 Power Supply

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Hazardous voltage!</b></p> <p><i>Parts of the power supply may be exposed with hazardous voltage. Always remove mains/line connector before carry out any assembly work.</i></p>                                                                                                                                                                                                                     |
|  | <p><b>Caution!</b></p> <p><i>Your system has not been provided with a AC power cable. Purchase a AC power cable that is approved for use in your country. The AC power cable must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.</i></p> |


The CPCI system can be powered by CPCI plug-in power supplies with wide range input (100 - 240 VAC).

The power supplies can be plugged-in in dedicated slots at the right front side. The power supplies contact via 47-position connectors to the backplane.

The power input is provided by a AC mains/line module with IEC 320-C14 connector, integrated mains/line fuses and line filter.

The fuse rating is 8 A slow blow.

**Figure 2: AC Terminal - Grounding**

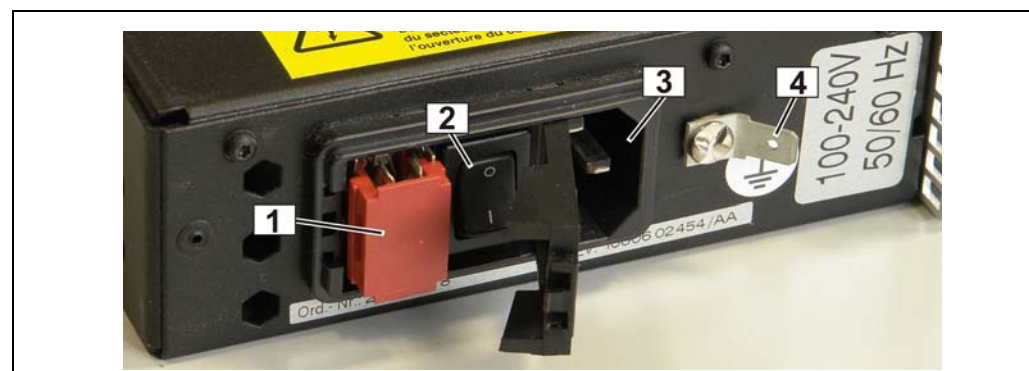

12308803

- |   |                   |   |                           |
|---|-------------------|---|---------------------------|
| 1 | Fuseholder        | 3 | AC Connector (IEC320-C14) |
| 2 | Mains/line switch | 4 | 6,3 mm faston connector   |

### 2.5.1 Grounding/Earthing

|                                                                                     |                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Caution!</b></p> <p><i>The unit is designed in accordance with protection class 1! It must therefore be operated with protective earth/GND connection. Use only a three conductor AC power cable with a protective earth conductor that meets the IEC safety standards!</i></p> |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

There is a 6,3 mm faston connector at the rear panel. This connector is only for equipotential bonding. Grounding is achieved through the protective earth conductor of the power cable!

## 2.5.2 CPCI Plug-In AC Power Supply (Order separately)

Figure 3: Power Supply



10006814

Table 1: Data AC Power Supply


|                            |                                                                 |
|----------------------------|-----------------------------------------------------------------|
| Input voltage nominal      | 100 - 240 VAC                                                   |
| Mains Frequency            | 50 / 60 Hz                                                      |
| Output (max.)              | 250 W                                                           |
| Output voltages            | 3.3 V - 40 A<br>5.0 V - 40 A<br>12.0 V - 5.5 A<br>-12.0 V - 2 A |
| Ripple                     | < 1 %                                                           |
| Dynamic response           | < 1 % or 60 mV                                                  |
| Recovery time to within 1% | < 300 µsec                                                      |
| Overvoltage protection     | for all voltages<br>120 – 130 % U > 5 Vr                        |
| Overcurrent protection     | 105 – 130 % of rated output current                             |
| Hold-up time               | >= 20 ms                                                        |



*An 48 VDC power supply is available on request.*

## 2.6 Cooling

Figure 4: Fan Tray

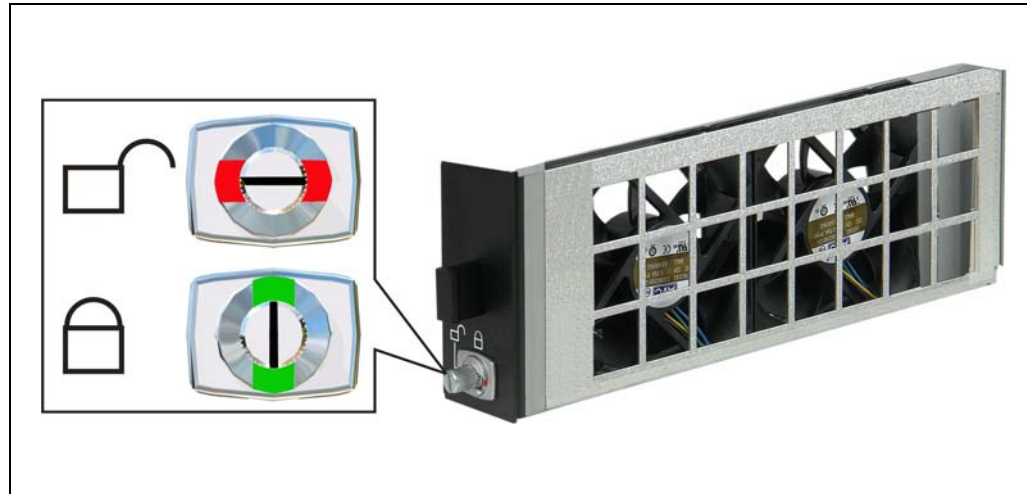

12311810

The CPCI boards are cooled by forced air convection through two 12 VDC axial fans (109 m<sup>3</sup>/h (64 cfm) each).

The operating temperature is from 0°C to 50°C, but note that the power supply starts derating at 50°C.

## 2.7 Remove/Install Fan Tray

The Fan Tray is locked into the chassis by a mini compression latch with indicator red/green. In closed position the indicator shows green, in open position the indicator shows red.

### Remove Fan Tray:


- Turn the knob counterclockwise until the indicator shows red.
- Pull out the Fan Tray:

### Install Fan Tray:

- Insert the Fan Tray into the slot

Turn the knob clockwise until the Fan Tray is locked into the chassis. (By turning the knob clockwise, the cam is put into the latched position and the green indicator appears. Once latched, a further turning of the knob makes the cam start its compression feature until the Fan Tray is locked.)

Figure 5: Air Flow

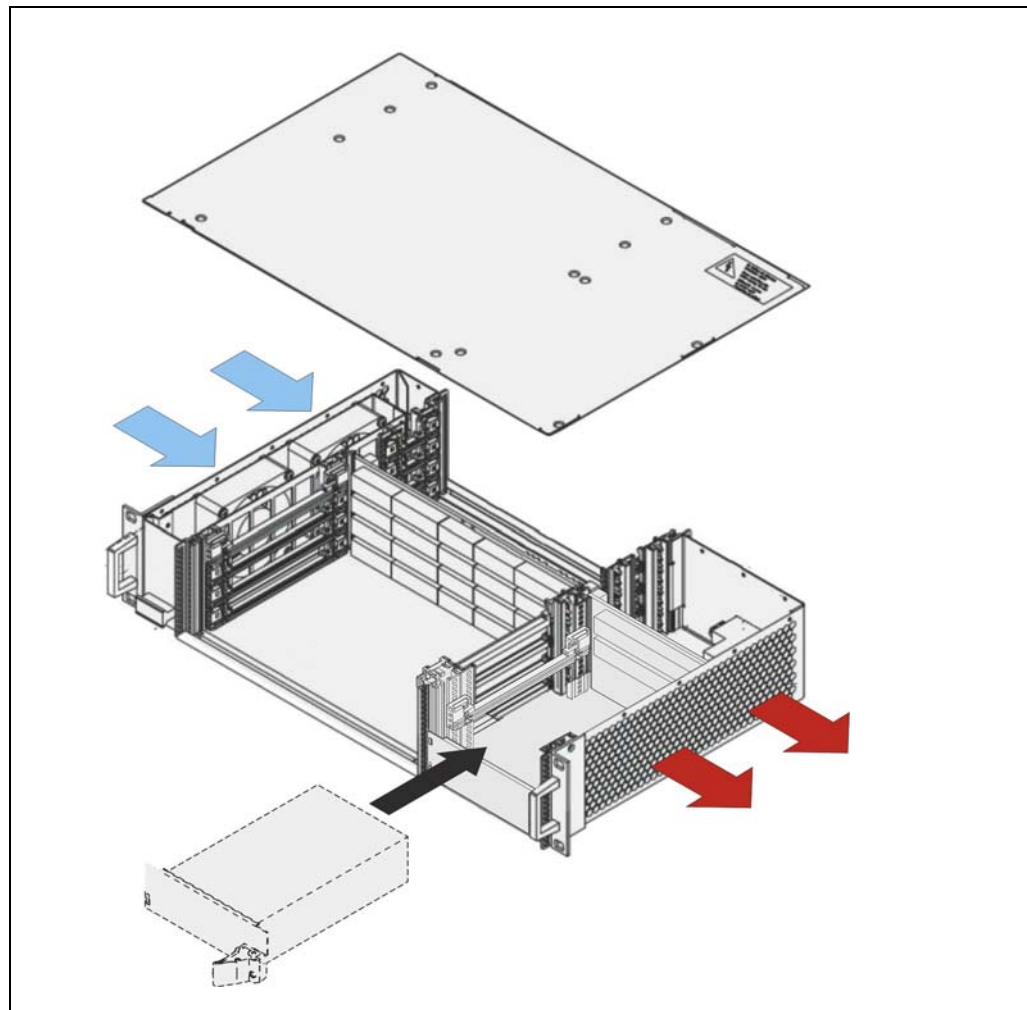

12311814



**Caution!**

*To maintain proper airflow, all open slots must be covered with filler panels. The filler panel should include an airflow baffle that extends to backplane.*

## 3 Installation

### 3.1 General Installation Guidelines

#### 3.1.1 Unpacking



**Caution!**

*When opening the shipping carton, use caution to avoid damaging the system.*

Consider the following when unpacking and storing the system:

- Leave the system packed until it is needed for immediate installation.
- After unpacking the system, save and store the packaging material in case the system must be returned.

If the packaging is damaged and possible system damage is present, report to the shipper and analyze the damage.

#### 3.1.2 Ensuring Proper Airflow

- Install the system in an open rack whenever possible. If installation in an enclosed rack is unavoidable, ensure that the rack has adequate ventilation.
- Maintain ambient airflow to ensure normal operation. If the airflow is blocked or restricted, or if the intake air is too warm, an over temperature condition can occur.
- Ensure that cables from other equipment do not obstruct the airflow through the systems.
- Use filler panels to cover all empty chassis slots. The filler panel prevents fan air from escaping out of the front of an open slot.



**Caution!**

*To maintain proper airflow, all open slots must be covered with filler panels. The filler panel should include an airflow baffle that extends to backplane.*

## 3.2 Rack-Mounting

This subrack system can be installed in 19" equipment racks. The rack must be accessible from the front and rear for equipment installation.

### Mounting Instructions:

- Ensure that the rack is constructed to support the weight and dimensions of the system.
- Install any stabilizers that came with your equipment rack before mounting or servicing the system in the rack.
- Load the rack from the bottom to the top, with the heaviest system at the bottom, avoid uneven mechanical loading of the rack.

## 3.3 Initial Operation



### Warning!

*Voltages over 60 VDC can be present in this equipment. This equipment is intended to be accessed, to be installed and maintained by qualified and trained service personnel only.*

*This equipment is designed in accordance with protection class 1!*

*It must therefore be operated only with protective GND/earth connection!*

- Ensure that the system has not been damaged during transport, storage or assembly.
- Check the Protective Earth (PE) resistance, should be < 0,1 Ohm.
- Switch on the system and check all CPCI voltages directly on the backplane connectors before the board assembly.
- Plug-in the boards
- Cover all open Slots with filler panels.

## 4 Service

### 4.1 Technical support and Return for Service Assistance

We generally recommend to return the complete subrack system. For all product returns and support issues, please contact your Schroff sales distributor or [www.schroff.biz](http://www.schroff.biz).

We recommend that you save the packing material. Shipping without the original packing material might void the warranty.

### 4.2 Declaration of Conformity

SCHROFF CompactPCI system subracks are developed and manufactured according to EN 60950-1.

SCHROFF CompactPCI system subracks are not end-products with independent functionality as described in the definition of the EMC regulations, and therefore a CE marking is not required. However, when CPCI cards are assembled according to specification, the systems fulfill the requirements in accordance with EMC Directive 2004/108/EG and Low-voltage Directive 2006/95/EG.

Interference resistance and interference emissions are factors which are heavily influenced by the type and quantity of CPCI cards used in the system assembly. Through the use of high quality line filters and EMC optimized enclosure design, SCHROFF offers CPCI systems which serve as an ideal base for system integrators, which comply with the prescribed limits of EN 6100-6-3 and EN 61000-6-2

The systems are generally equipped with power supplies which possess CE markings in accordance with EN 60950-1, EN 61000-6-3, EN 61000-6-2).

Before delivery a high-voltage, protective earth and functionality test is carried out on each individual system.

## 4.3 Scope of Delivery

| Quantity | Description                                                                                                            |
|----------|------------------------------------------------------------------------------------------------------------------------|
| 1        | 19" subrack, shielded, black powder coated (RAL9005)                                                                   |
| 1        | CPCI backplane (PICMG2.0 R.3.0), 4 slot 6 U, system slot left                                                          |
| 1        | Front card cage for max. 4 boards 6 U 160 mm deep<br>IEEE guide rails inc. ESD clips (ESD clip assembled at the right) |
| 1        | Rear card cage for max. 4 boards 6 U 80 mm deep<br>IEEE guide rails inc. ESD clips                                     |
| 2        | Slots for 2 CPCI plug-in power supplies                                                                                |
| 1        | Complete AC/DC cabling                                                                                                 |
| 1        | Power input module with IEC 320-C14 connector, mains/line switch, mains/line filter and fuses                          |
| 1        | Fan Tray, hot swappable                                                                                                |

## 4.4 Accessories

| Order No. | Description                                                                                            |
|-----------|--------------------------------------------------------------------------------------------------------|
| 13100-141 | 250 W plug-in power supply with wide range input                                                       |
| 20848-7xx | Slot covers with front panel and EMC shielding for vacant slots. For dimensions, please see catalogue. |
| 34562-8xx | Slot covers for vacant slots. For dimensions, please see catalogue.                                    |
| 24579-03x | Printed Circuit Board covers (perforated solder side covers). For dimensions, please see catalogue     |

## 4.5 Spare Parts

On request.


## 5 Technical Data

Table 2: Technical Data

|                                       |                                                                                                        |
|---------------------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Dimensions</b>                     |                                                                                                        |
| Height                                | 88.10 mm (2 U)                                                                                         |
| Width                                 | 482.80 mm (19")                                                                                        |
| Depth (Card cage)                     | 275 mm                                                                                                 |
| Depth (Overall with handles)          | 309 mm                                                                                                 |
| <b>Weight</b>                         |                                                                                                        |
| Completely assembled                  | 6 kg                                                                                                   |
| <b>Power Supply</b>                   |                                                                                                        |
| (order separately)                    |                                                                                                        |
| Input Voltage                         | 100 VAC bis 240 VAC                                                                                    |
| Frequency                             | 50 / 60 Hz                                                                                             |
| Power input                           | up to 500 W                                                                                            |
| <b>Cooling</b>                        |                                                                                                        |
| 2 x 12 VDC fans                       | 109 m³/h (64 cfm) each, free blow                                                                      |
| <b>Ambient Temperature</b>            |                                                                                                        |
| Operation                             | +0 °C to +50 °C                                                                                        |
| Storage                               | -40 °C to +85 °C                                                                                       |
| <b>Humidity</b>                       |                                                                                                        |
| Admissible humidity                   | 30 % to 80 %, non-condensing                                                                           |
| <b>EMC, fulfils requirements for:</b> |                                                                                                        |
| Transient Emissions                   | EN 61000-6-3                                                                                           |
| Interference Resistance               | EN 61000-6-2                                                                                           |
| <b>Safety</b>                         |                                                                                                        |
| Test voltages according to EN 60950   | Input - Output: 4,3 kVDC<br>Input - PE: 2,2 kVDC<br>Output - PE: 0,7 kVDC<br>Output - Output: 0,7 kVDC |
| Shock and vibration:                  | EN 60068-2-6 and EN 60068-2-27                                                                         |
| <b>Electromagnetic Shielding</b>      |                                                                                                        |
| Shielding attenuation                 | typ. 40 dB at 1 GHz if shielded front panels are used.                                                 |

## 6 Dimensions

Figure 6: Dimensions

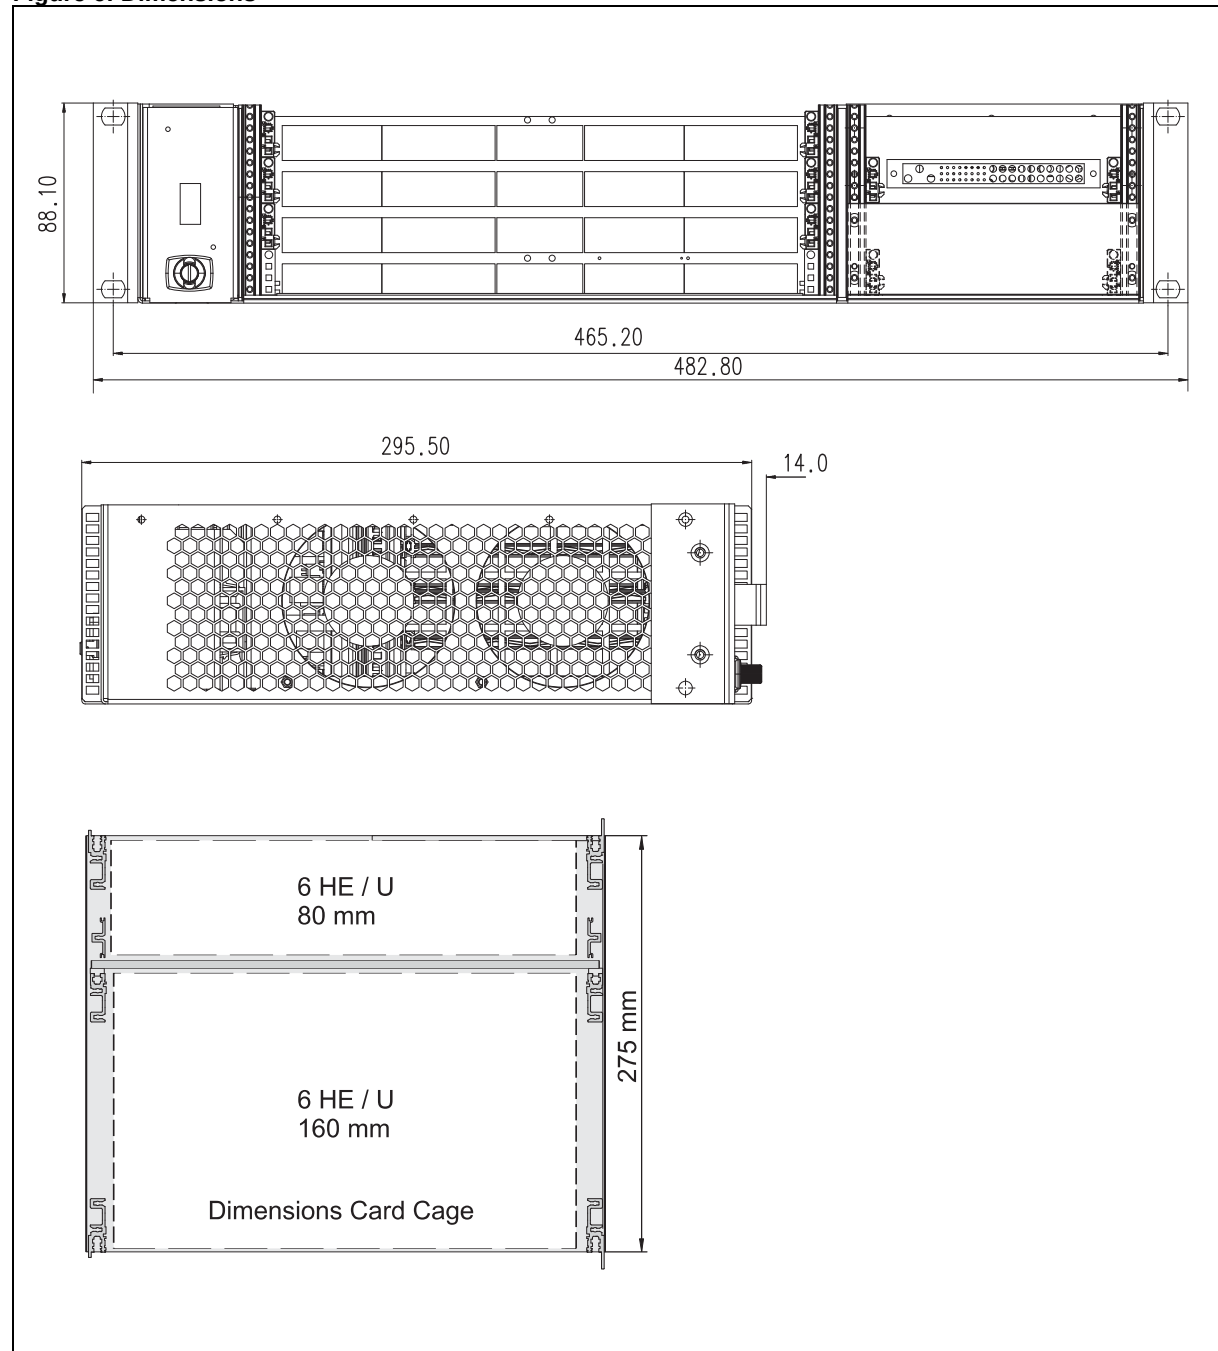



**SCHROFF GMBH**

**[www.schroff.biz](http://www.schroff.biz)**

**Langenalberstr. 96-100  
D-75334 Straubenhardt**

**Tel.: + 49 (0) 7082 794-0**

**Fax: +49 (0) 7082 794-200**