


Assembly Instructions

1. **Warning:** If the +V1 and +V2 voltage rails are tied to ground and the +12V power is used, the nominal voltage between the +12V and the -V1 and -V2 power rails is 60 volts. With voltage tolerances, the 60 volt maximum is exceeded. Additional protection might be needed to comply with local and national regulatory agencies.
2. **Mechanical Mounting:** Attach the backplane through the mounting holes in at least every second connector position at top and bottom using M2,5 screws and isolating washers.
3. **Chassis GND:** If noise reduction shall be achieved by connecting digital GND to Chassis GND, use conductive washers instead of isolating ones. Spring washers are recommended instead of flat washers. Creepage and clearance between screw and GND are in accordance with EN60950 is maintained by layout when using isolating washers.
4. **Live Insertion:** Schroff VME645x backplanes fulfil the requirements of the VME Live Insertion standard VITA 1.4. The LI/I* (Live Insertion IN) is an active low input signal to a VME64x LI board that acts to enable/disable the on-board power control logic. A set of two pins per slot for LI/I* and GND spaced by 100mil is optional available to use micro-connectors to connect the signal to a radial power control module.
5. **Daisy Chain:** Schroff VME64x Backplanes equipped with an electronic automatic daisy chain.



Mechanical and electrical interface

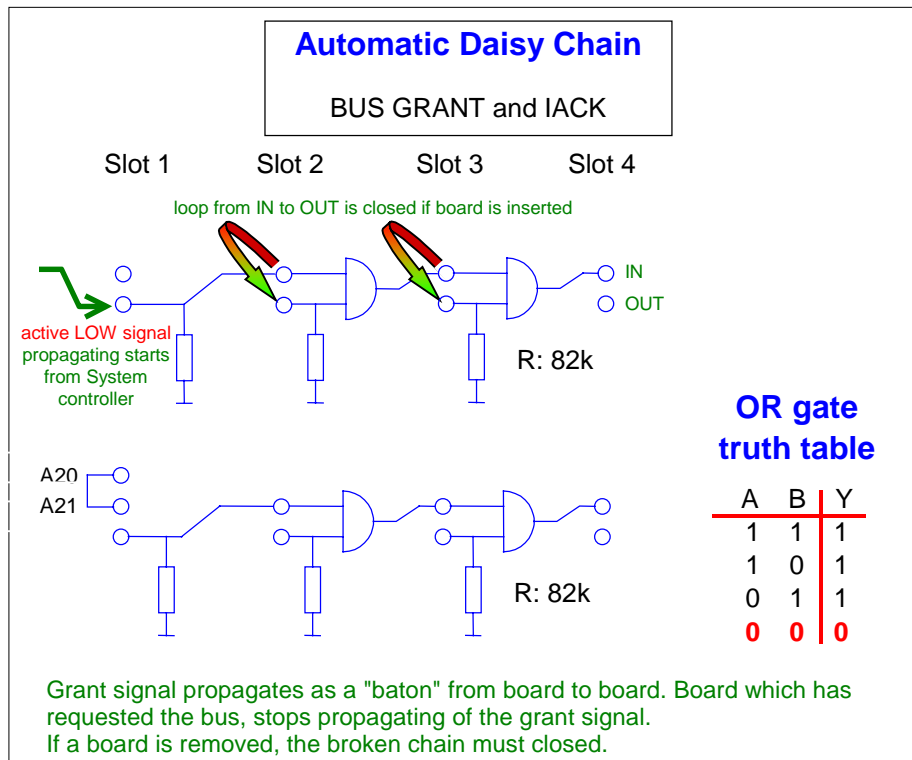